


# PRUNER

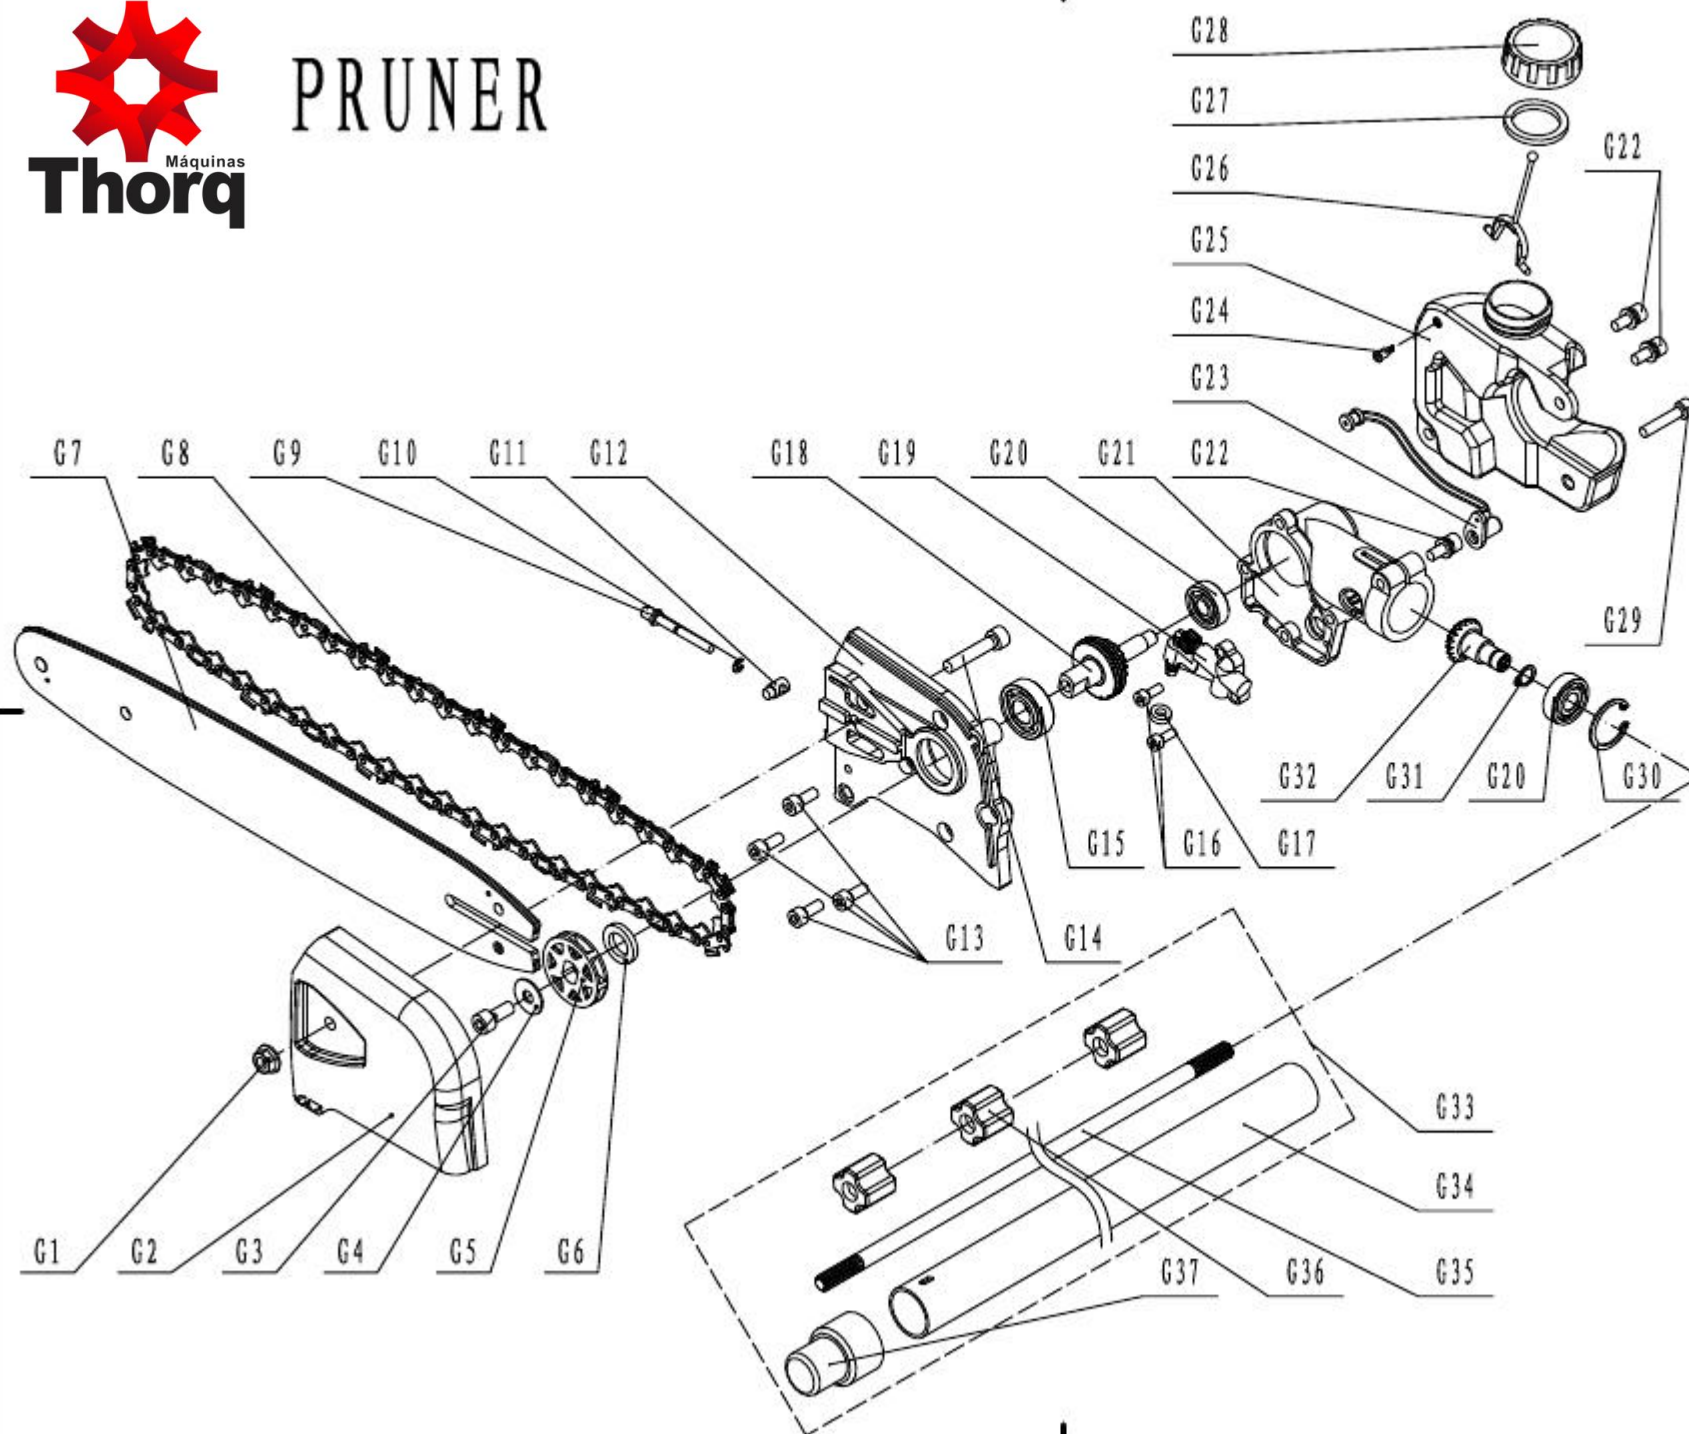

|     |                    |     |      |
|-----|--------------------|-----|------|
| G37 | Stopper            | 1   |      |
| G36 | Oil bearing        | 3   |      |
| G35 | Transmission shaft | 1   |      |
| G34 | Pipe               | 1   |      |
| G33 | Working shaft      | 1   |      |
| G32 | Transmission gear  | 1   |      |
| G31 | Φ9 ring            | 1   |      |
| G30 | Φ24 snap ring      | 1   |      |
| G29 | M5×25 screw        | 1   |      |
| G28 | Oil tank cap       | 1   |      |
| G27 | Gasket, oil tank   | 1   |      |
| G26 | Hook, oil tank     | 1   |      |
| G25 | Oil tank           | 1   |      |
| G24 | Valve              | 1   |      |
| G23 | Oil pipe           | 1   |      |
| G22 | M5×12 screw        | 3   |      |
| G21 | Gear case          | 1   |      |
| G20 | Bearing 627        | 2   |      |
| G19 | Oil pump           | 1   |      |
| G18 | Gear shaft         | 1   |      |
| G17 | Gasket             | 1   |      |
| G16 | M4×10 screw        | 2   |      |
| G15 | 6001 bearing       | 1   |      |
| G14 | M6×35 screw        | 1   |      |
| G13 | M5×12 screw        | 4   |      |
| G12 | Cover, Gear case   | 1   |      |
| G11 | Nut, tensioner     | 1   |      |
| G10 | Φ3 ring            | 1   |      |
| G9  | Screw, tensioner   | 1   |      |
| G8  | Chain              | 1   |      |
| G7  | Guide bar          | 1   |      |
| G6  | Gasket, bearing    | 1   |      |
| G5  | Sprocket           | 1   |      |
| G4  | Φ5 washer          | 1   |      |
| G3  | M6×14 screw        | 1   |      |
| G2  | Bar cover          | 1   |      |
| G1  | M6 nut             | 1   |      |
| NO. | Description        | QTY | NOTE |